Mantis Sub recommended configuration settings

Diving (no ethernet to surface)


| 0 | Control | | Mantis Sub | CONTROL | SETTINGS | -; . | COLORS | | | |
|---------|---------------|--|--|------------------------------|----------------------|-------------|--------|--|--|--|
| | Settings | | Configuration | | S C | | | | | |
| \$ | Configuration | | | | | | | | | |
| | Monitoring | | Button and profile settings Enabling profiles allows you to save up to four different recording se | ttings on the Settings page. | The settings are say | ved | | | | |
| 11. | Logfiles | in numbered slots. You can switch between slots by pressing the second (lower) button, if configured. The first press will show you the currently active slot by blinking blue (e.g. 2x blink for slot 2). Press the second button again within 10 seconds to switch to the next slot. The housing will then confirm your selection by blinking blue. The selected slot is | | | | | | | | |
| ÷ | LED Colors | saved until the housing is restarted. The housing always starts with slot 1 selected. | | | | | | | | |
| ? | Help | | Enable recording profiles | | | | | | | |
| | | | Button 1 function | | | | | | | |
| Version | n 2023-02-07 | | Start | | | • | | | | |
| | | | Button 2 function | | | | | | | |
| | | | Stop | | | ▼ | | | | |
| | | | | | | | | | | |

Power settings

192.168.43.1

Power is off by default. The housing activates power on the 12V power lead when configured to do so below, or when Camera is connected and its charge falls below the configured charge level.


Surface control with ethernet cable

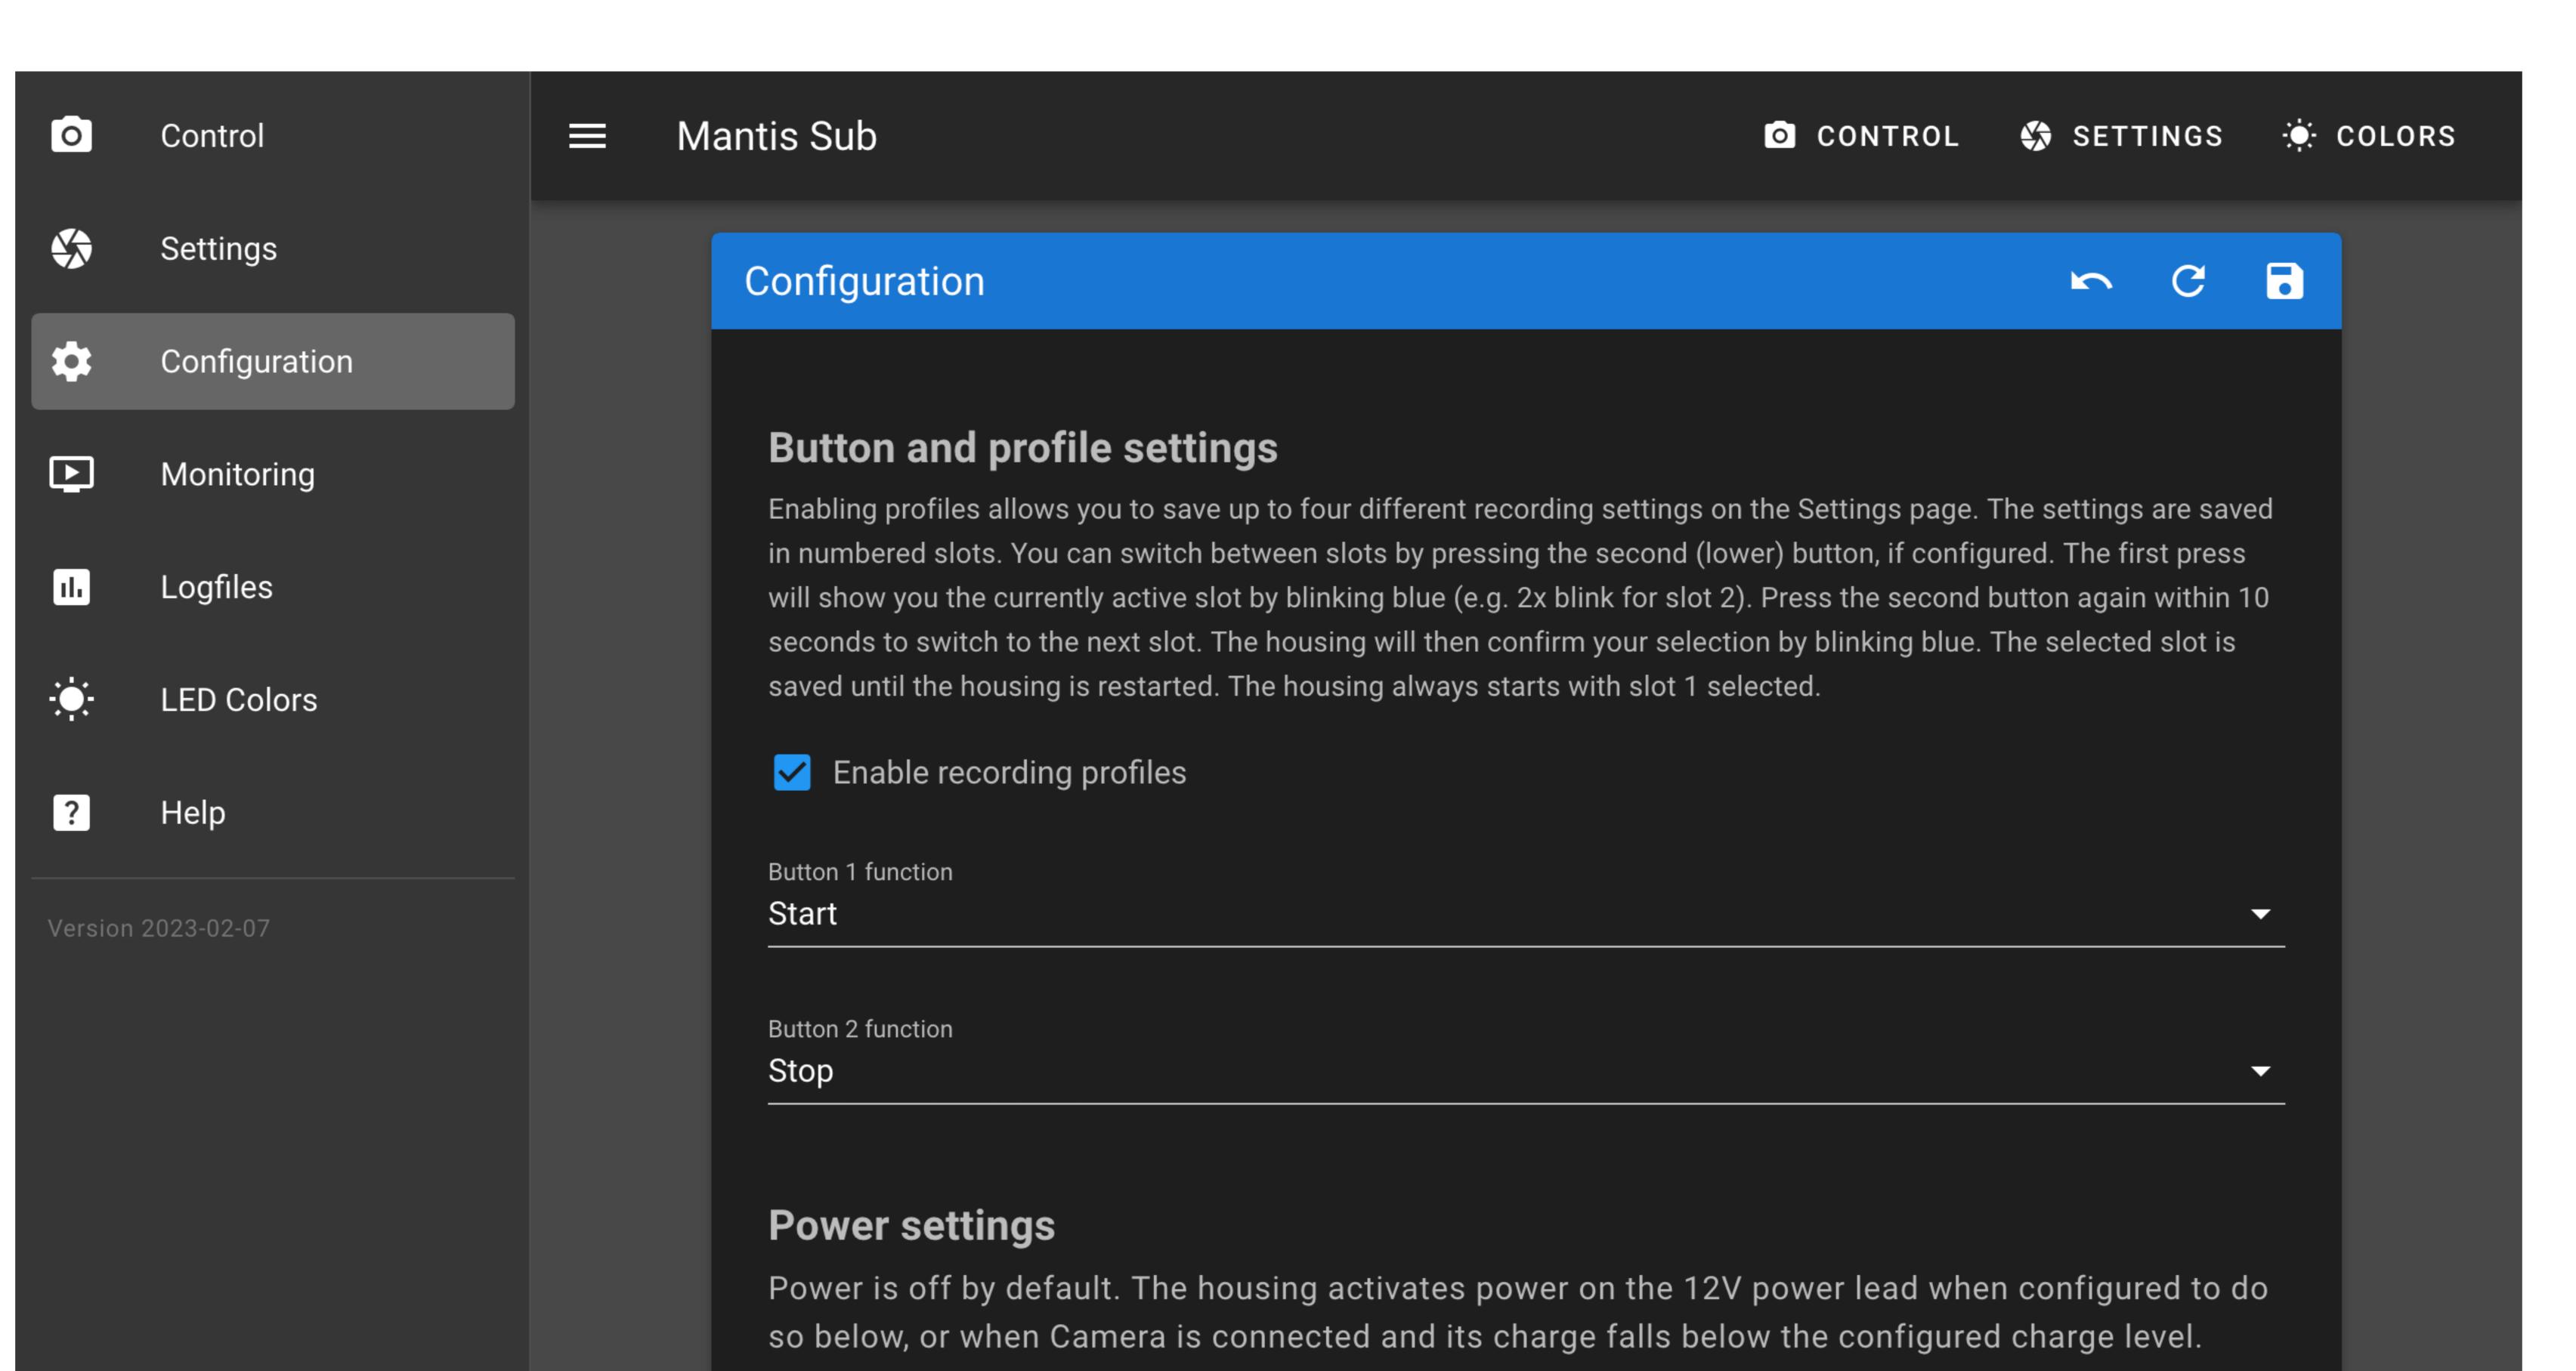



Surface control with hybrid cable


| 0 | Control | ≡ M | lantis Sub | CONTRO | OL 📢 | SETTINGS | s . | ¢:- |
|--------------------|---------------|-----|---|---|----------|------------------|----------|-----|
| | Settings | | Configuration | | | S C | • | |
| (| Configuration | | | | | | | |
| | Monitoring | | Button and profile settings Enabling profiles allows you to save up to four differe | ent recording settings on the Settings p | age. The | e settings are s | aved | |
| ıl. | Logfiles | | in numbered slots. You can switch between slots by will show you the currently active slot by blinking blu seconds to switch to the next slot. The housing will t | e (e.g. 2x blink for slot 2). Press the sec | ond but | ton again withi | n 10 | |
|). | LED Colors | | saved until the housing is restarted. The housing alw | | | | | |
| ? | Help | | Enable recording profiles | | | | | |
| | | | Button 1 function | | | | | |
| Version 2023-02-07 | | | Start | | | | | |
| | | | Button 2 function | | | | | |
| | | | Stop | | | | • | |
| | | | Dowor cottings | | | | | |
| | | | Power settings | | | | | |
| | | | Power is off by default. The housing activat so below, or when Camera is connected and | | | Ŭ | o do | |

Always supply 12V on the power lead (power is off while the housing is booting).

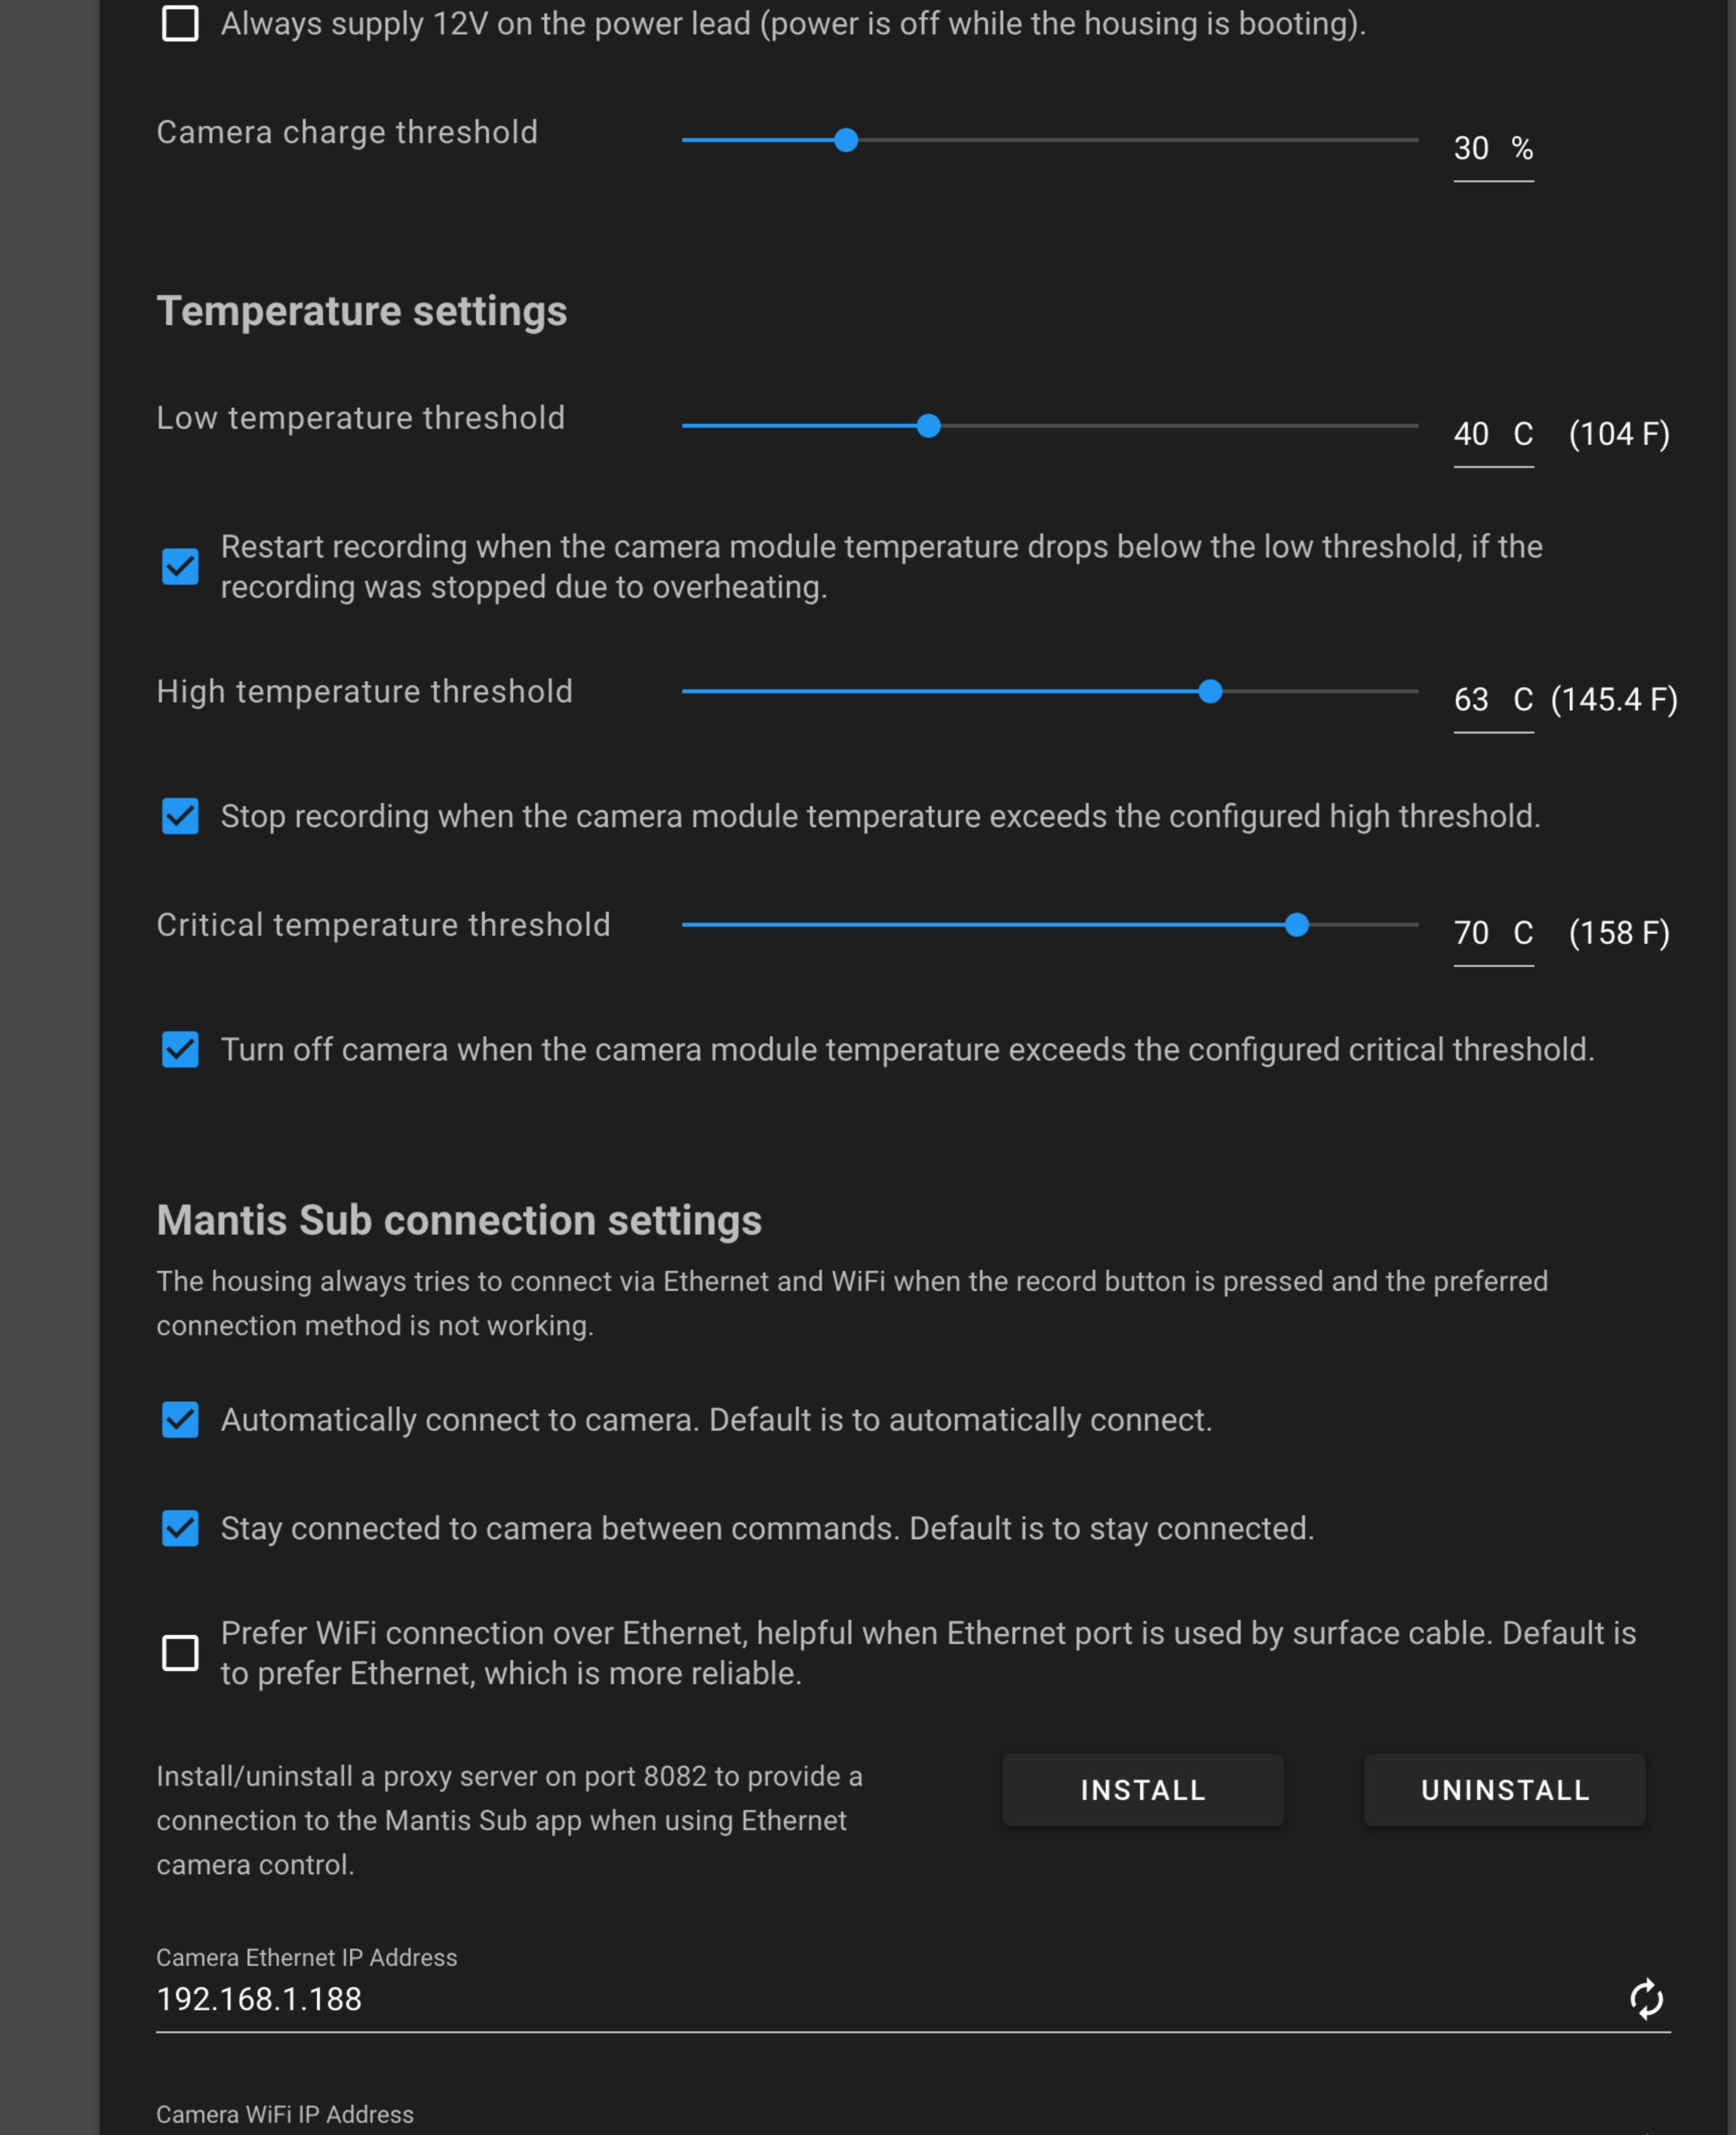


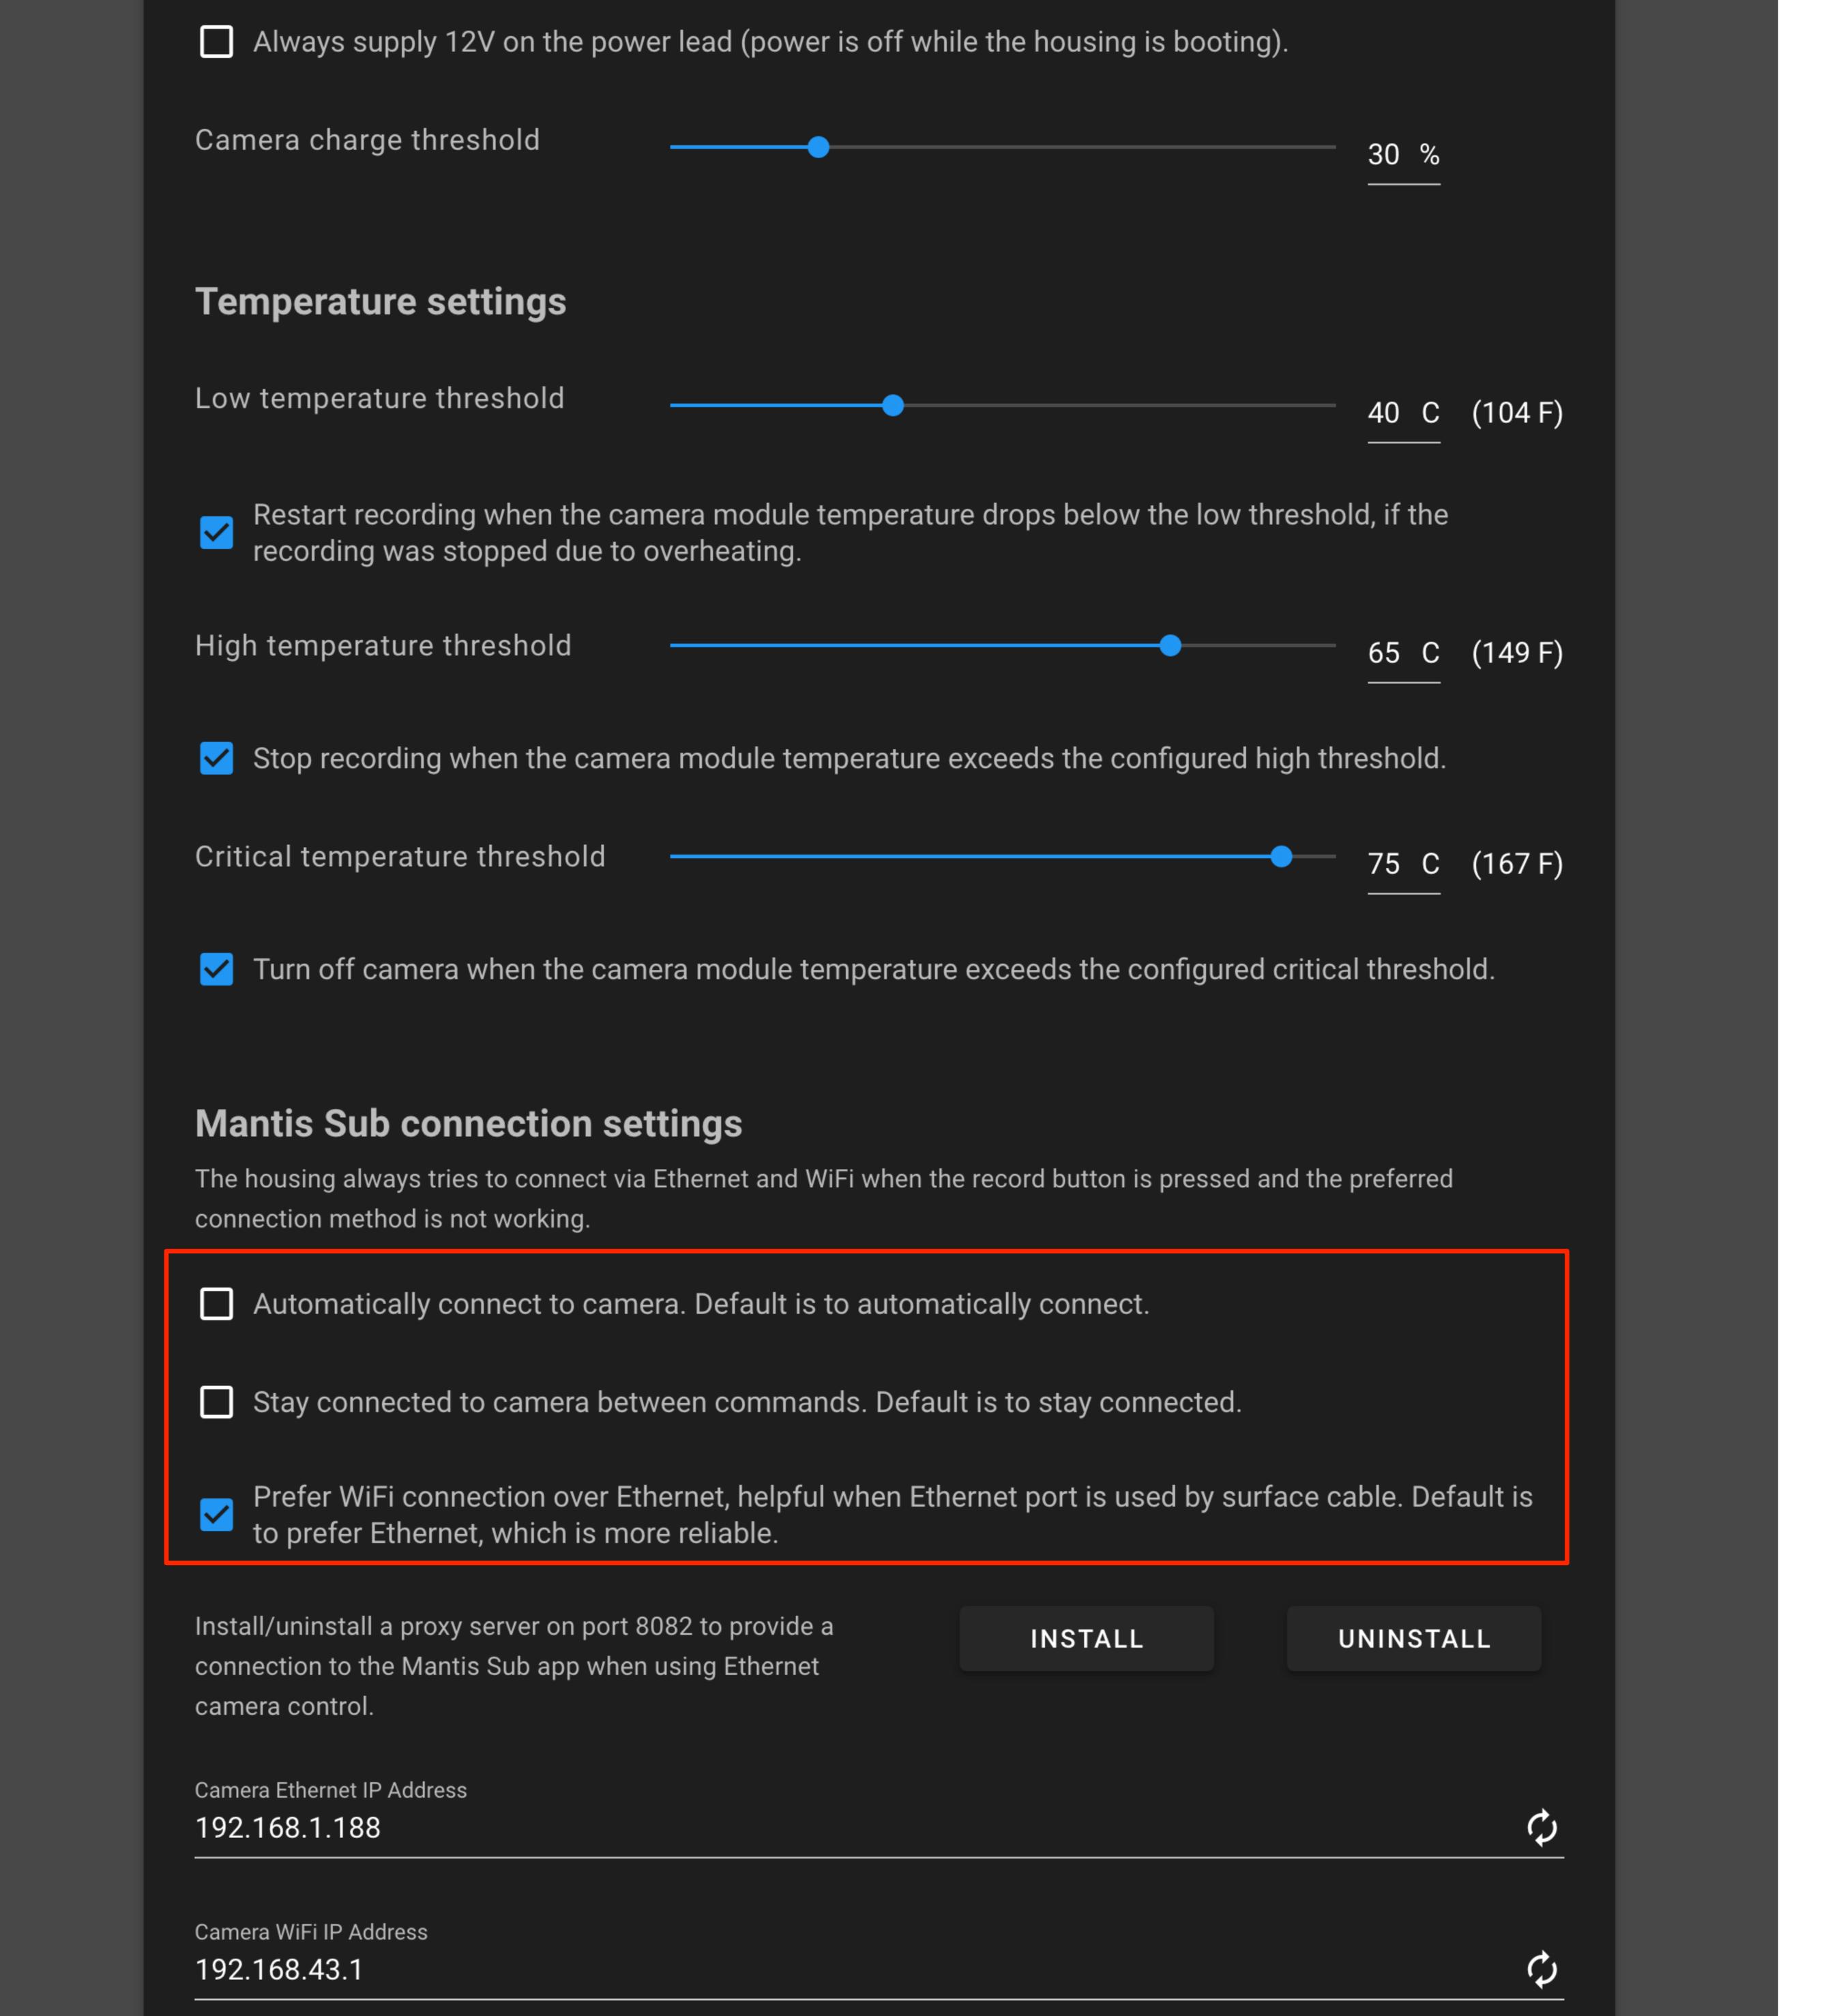

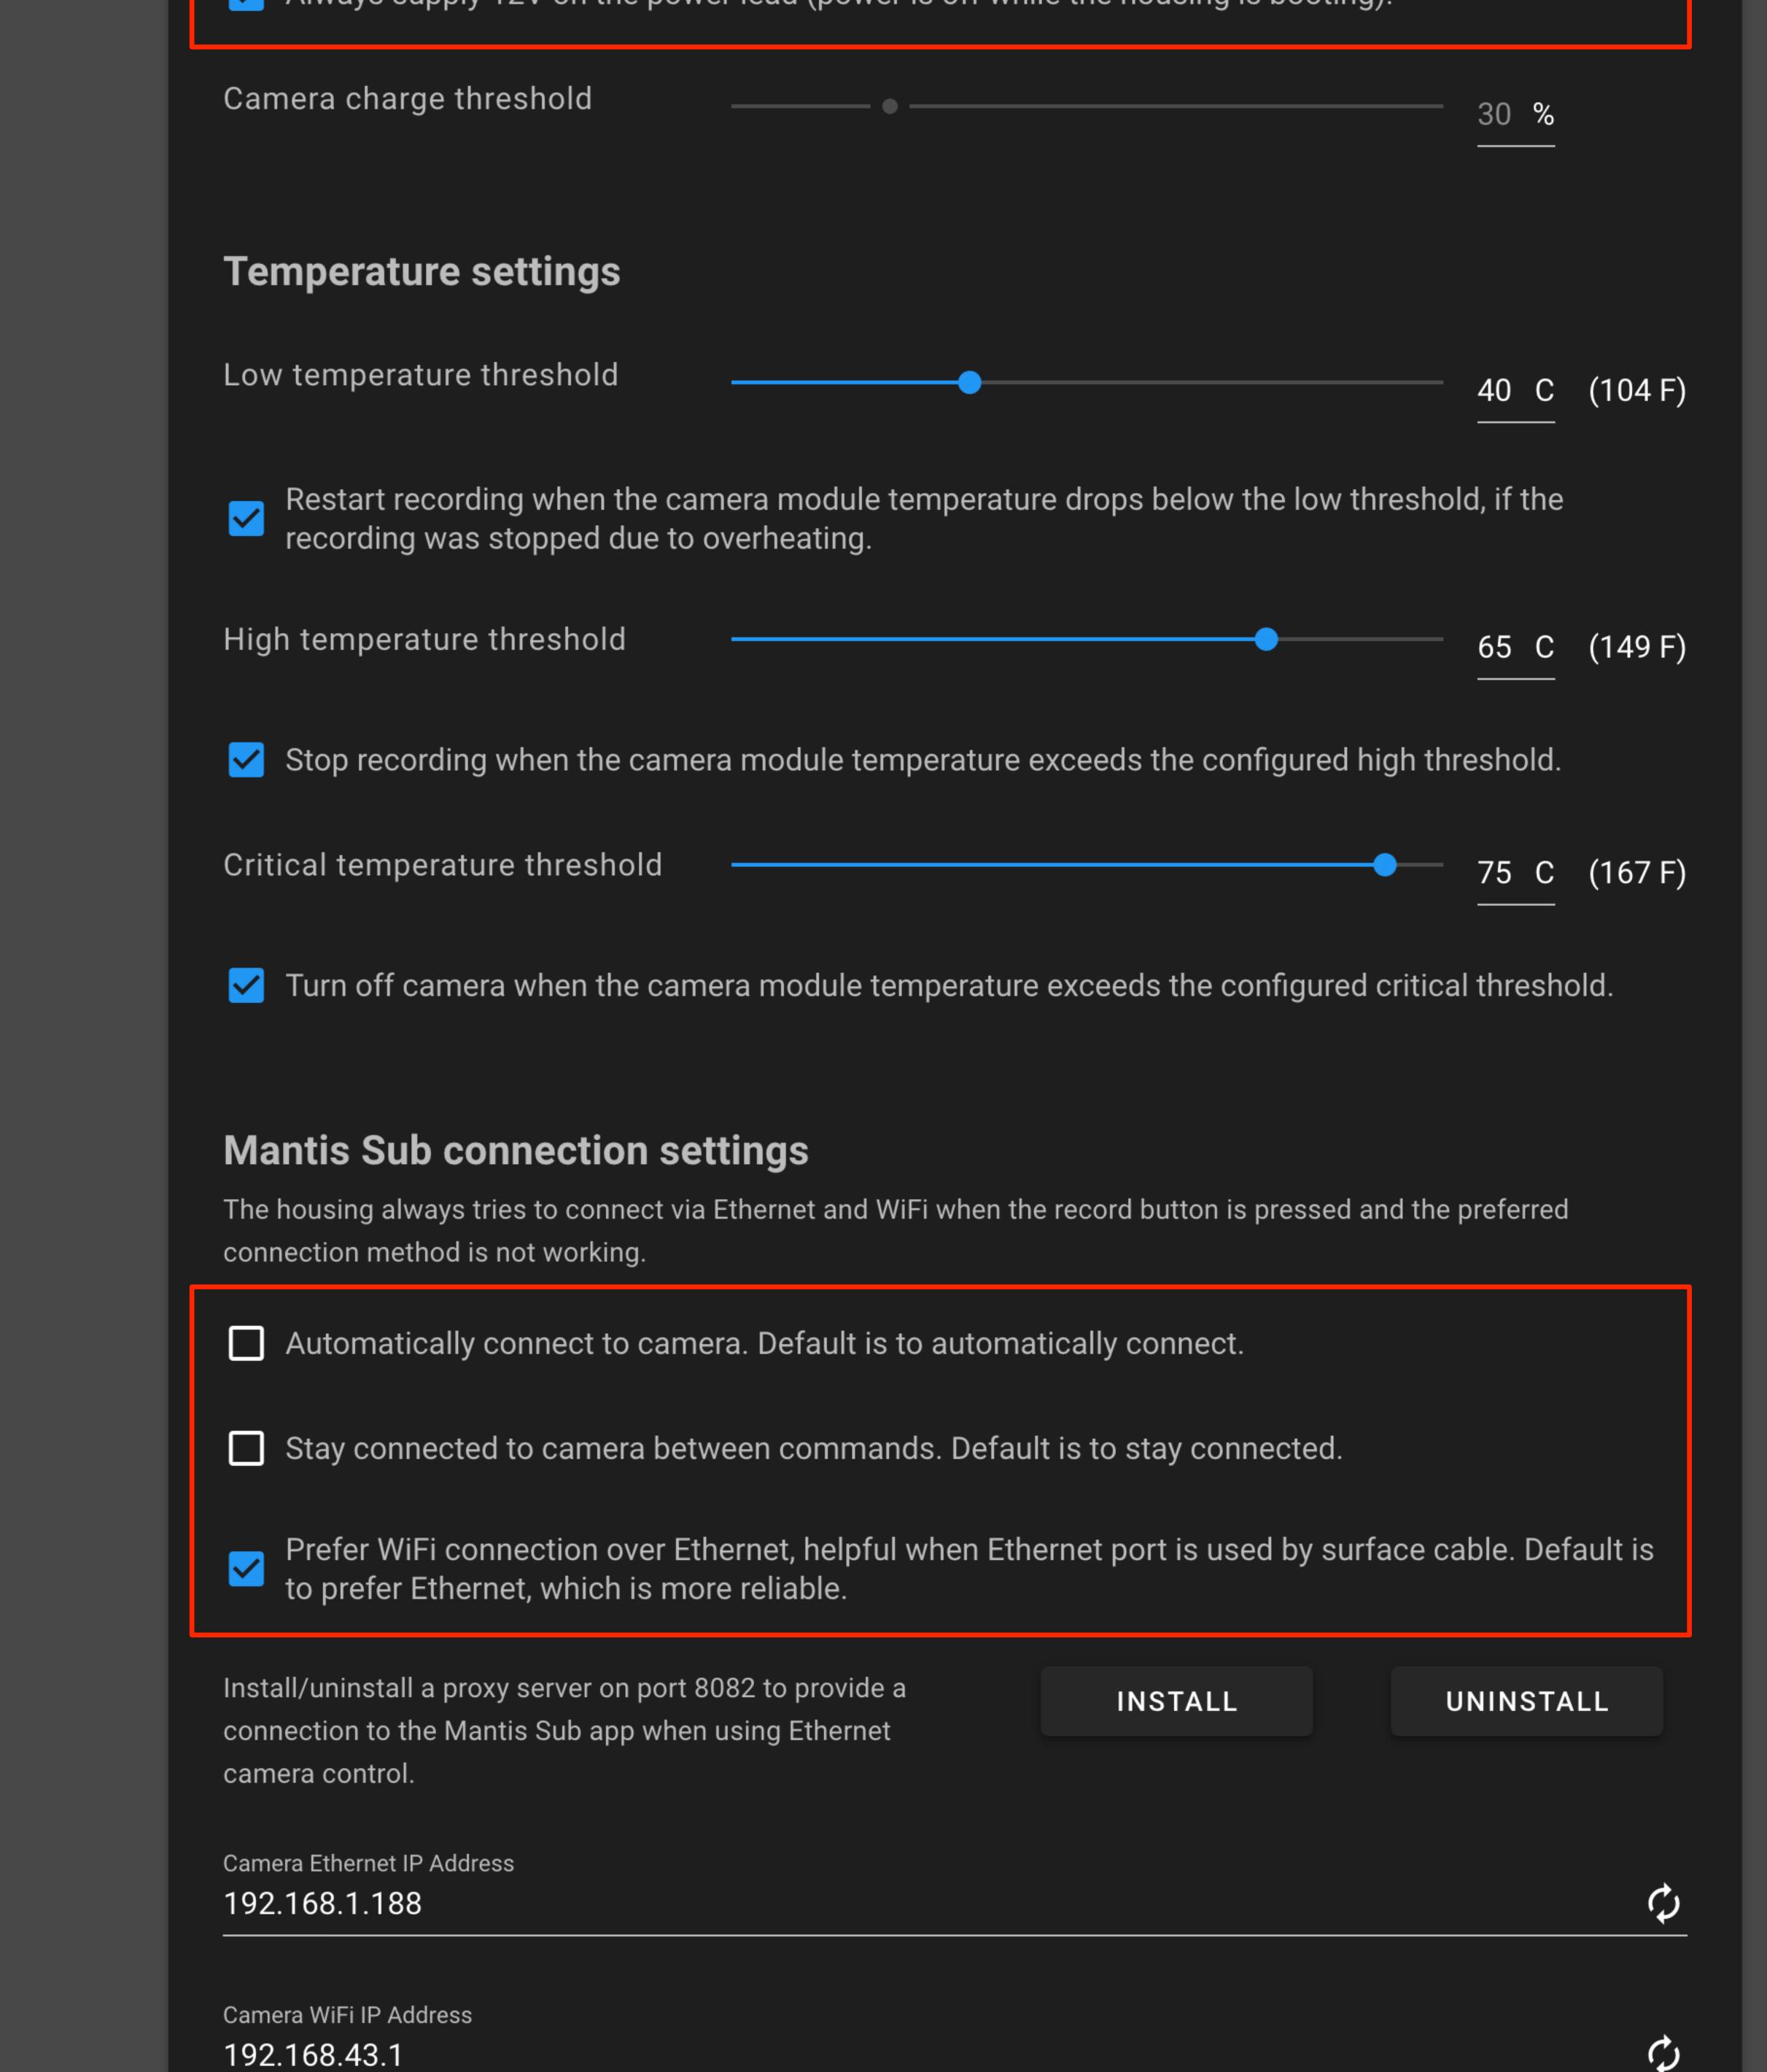

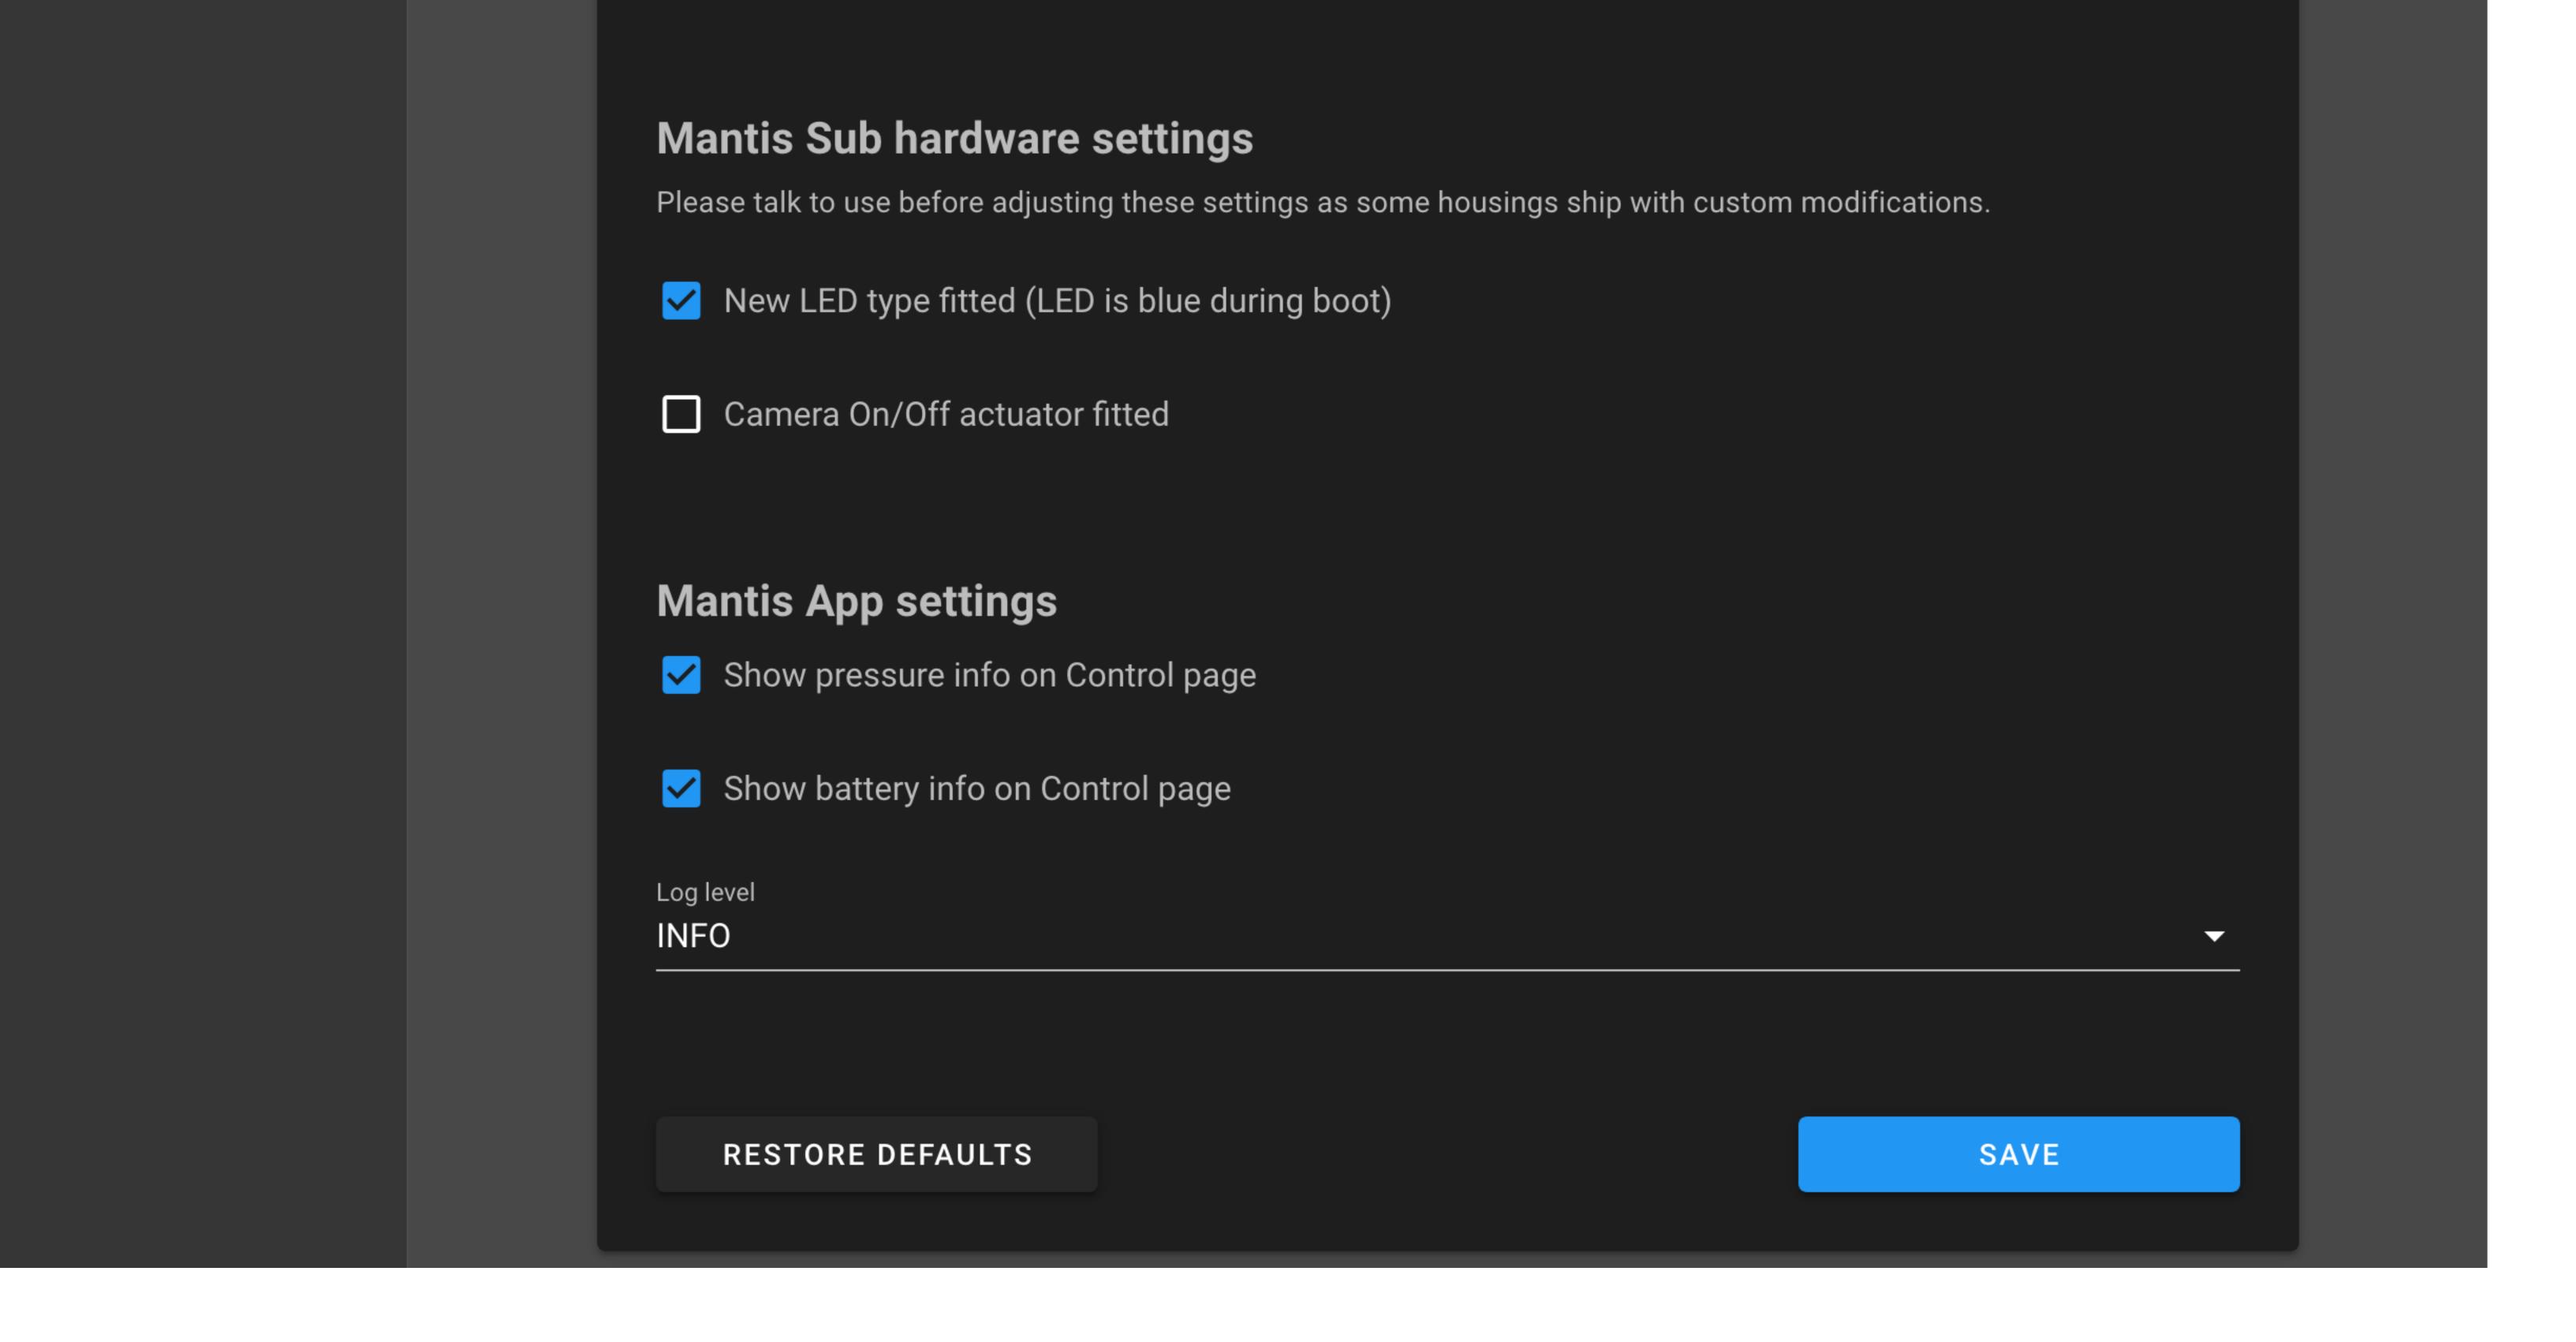


The recommended settings for diving are identical with the default settings. <u>Cimply alial IDECTODE DEEALUTCI than ICAVEI</u>

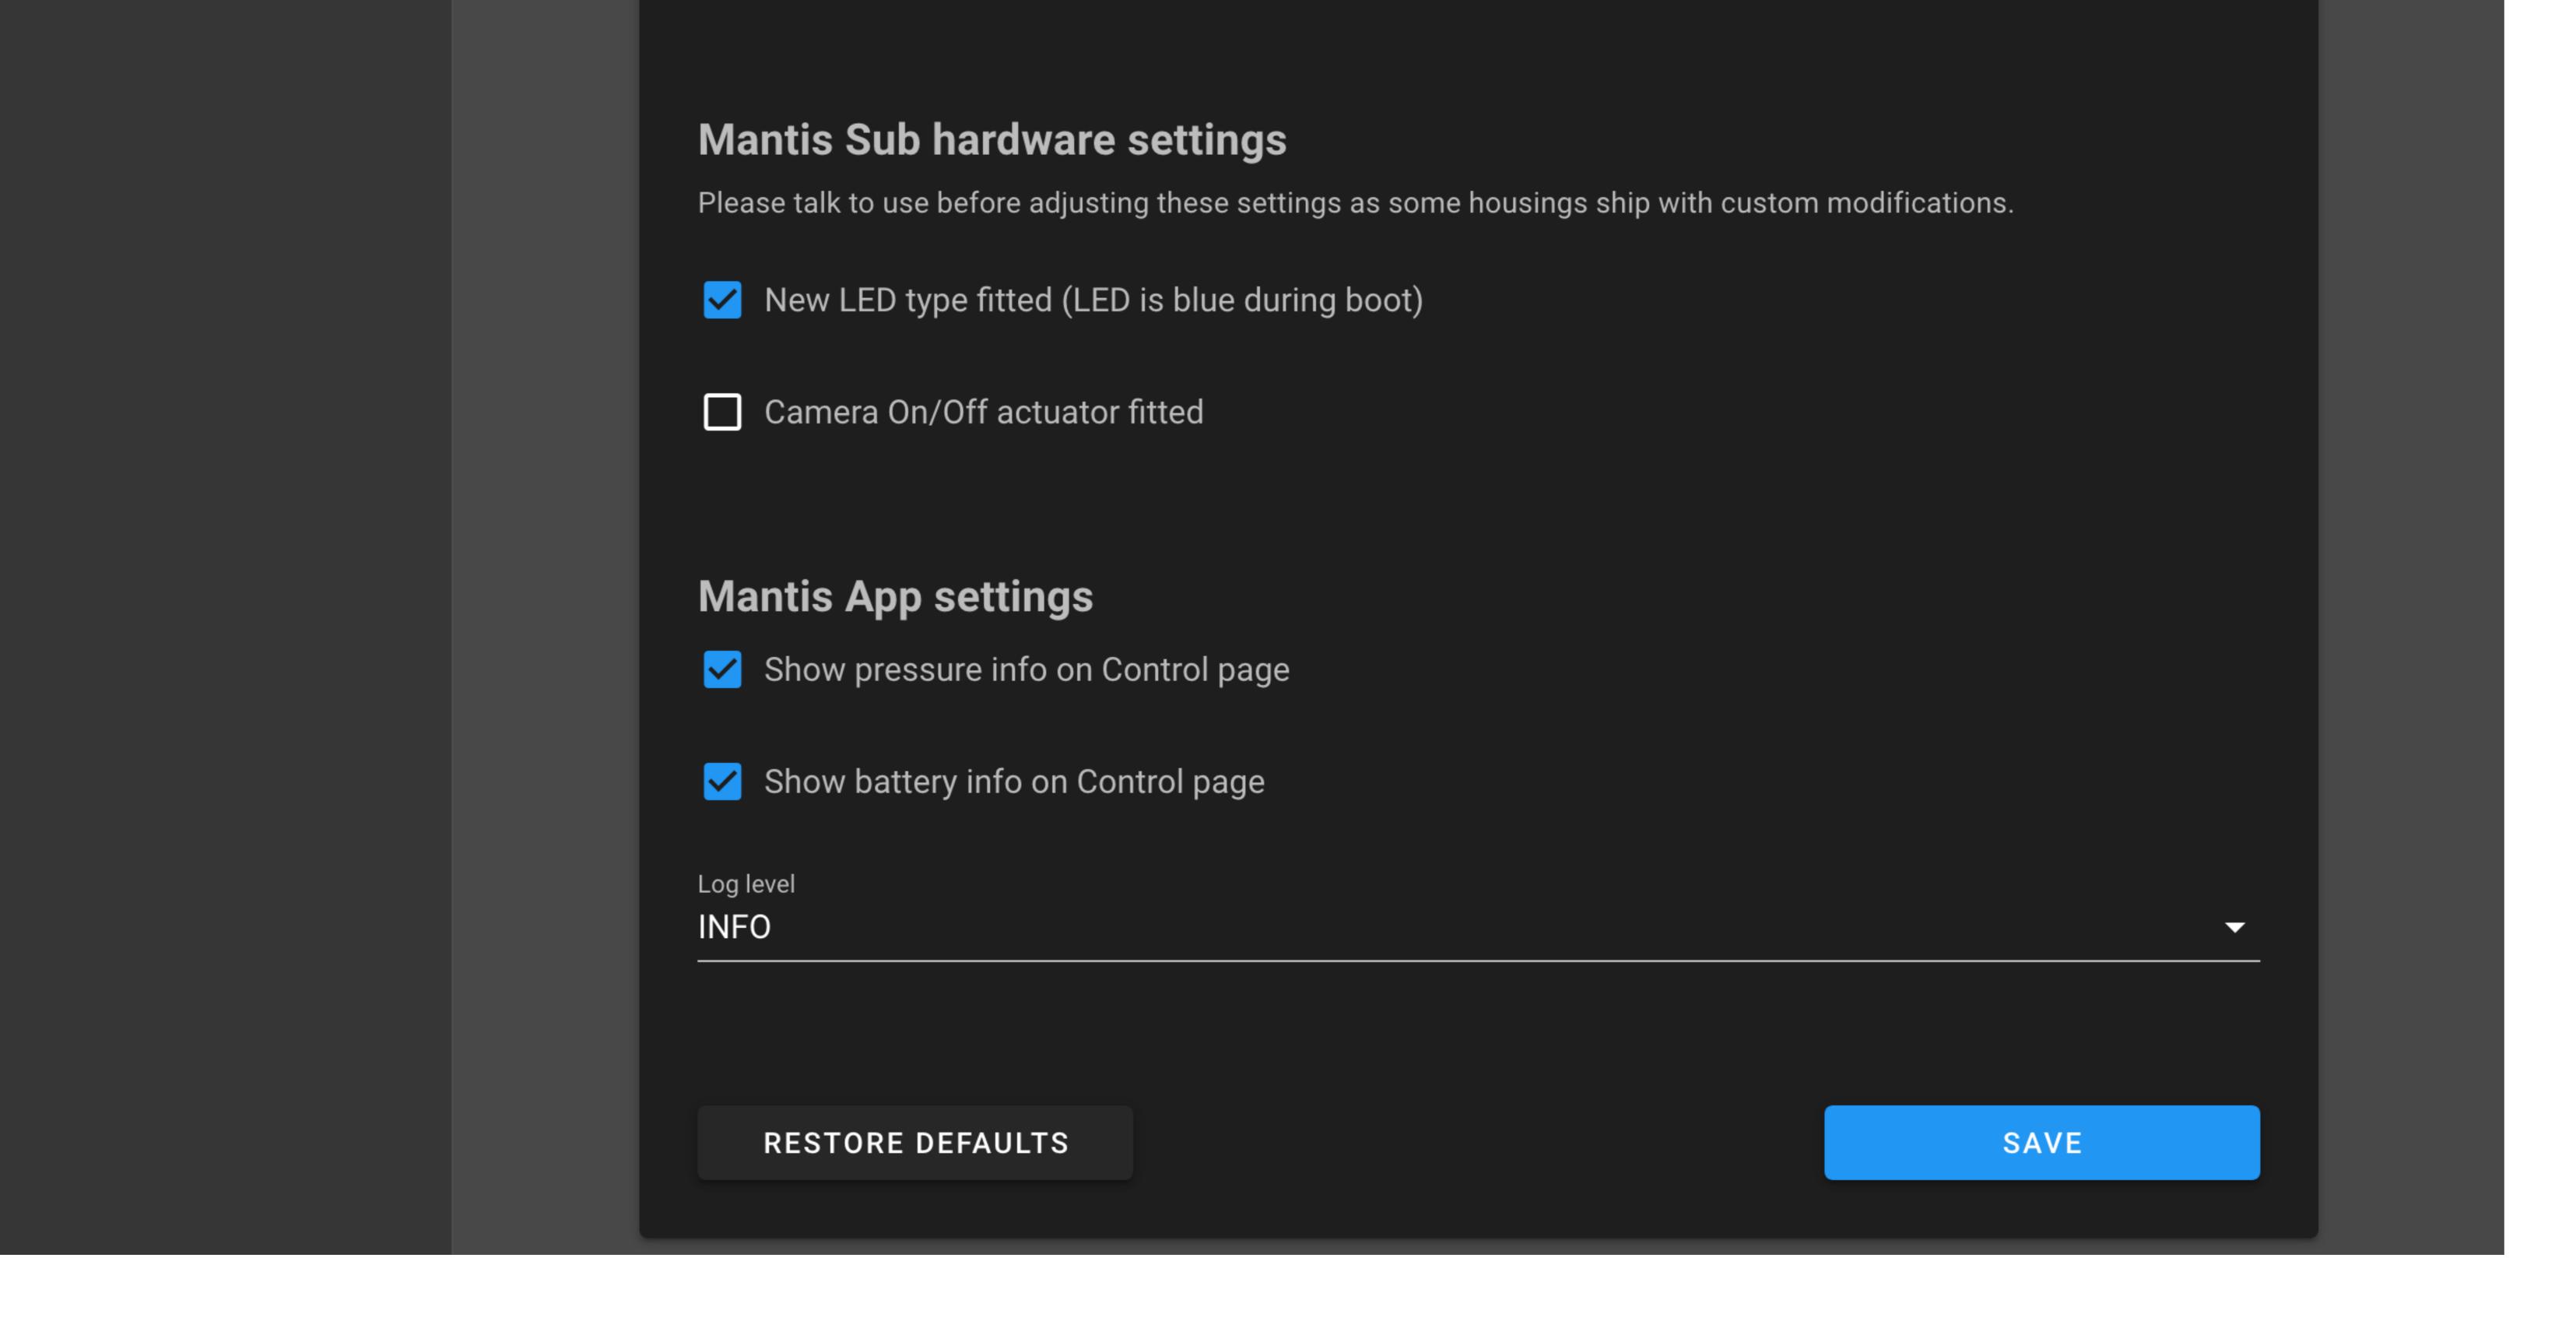

Connection settings:

The Insta360 Pro 2 only allows one controller to be <u>aanaatad at any timaa</u>

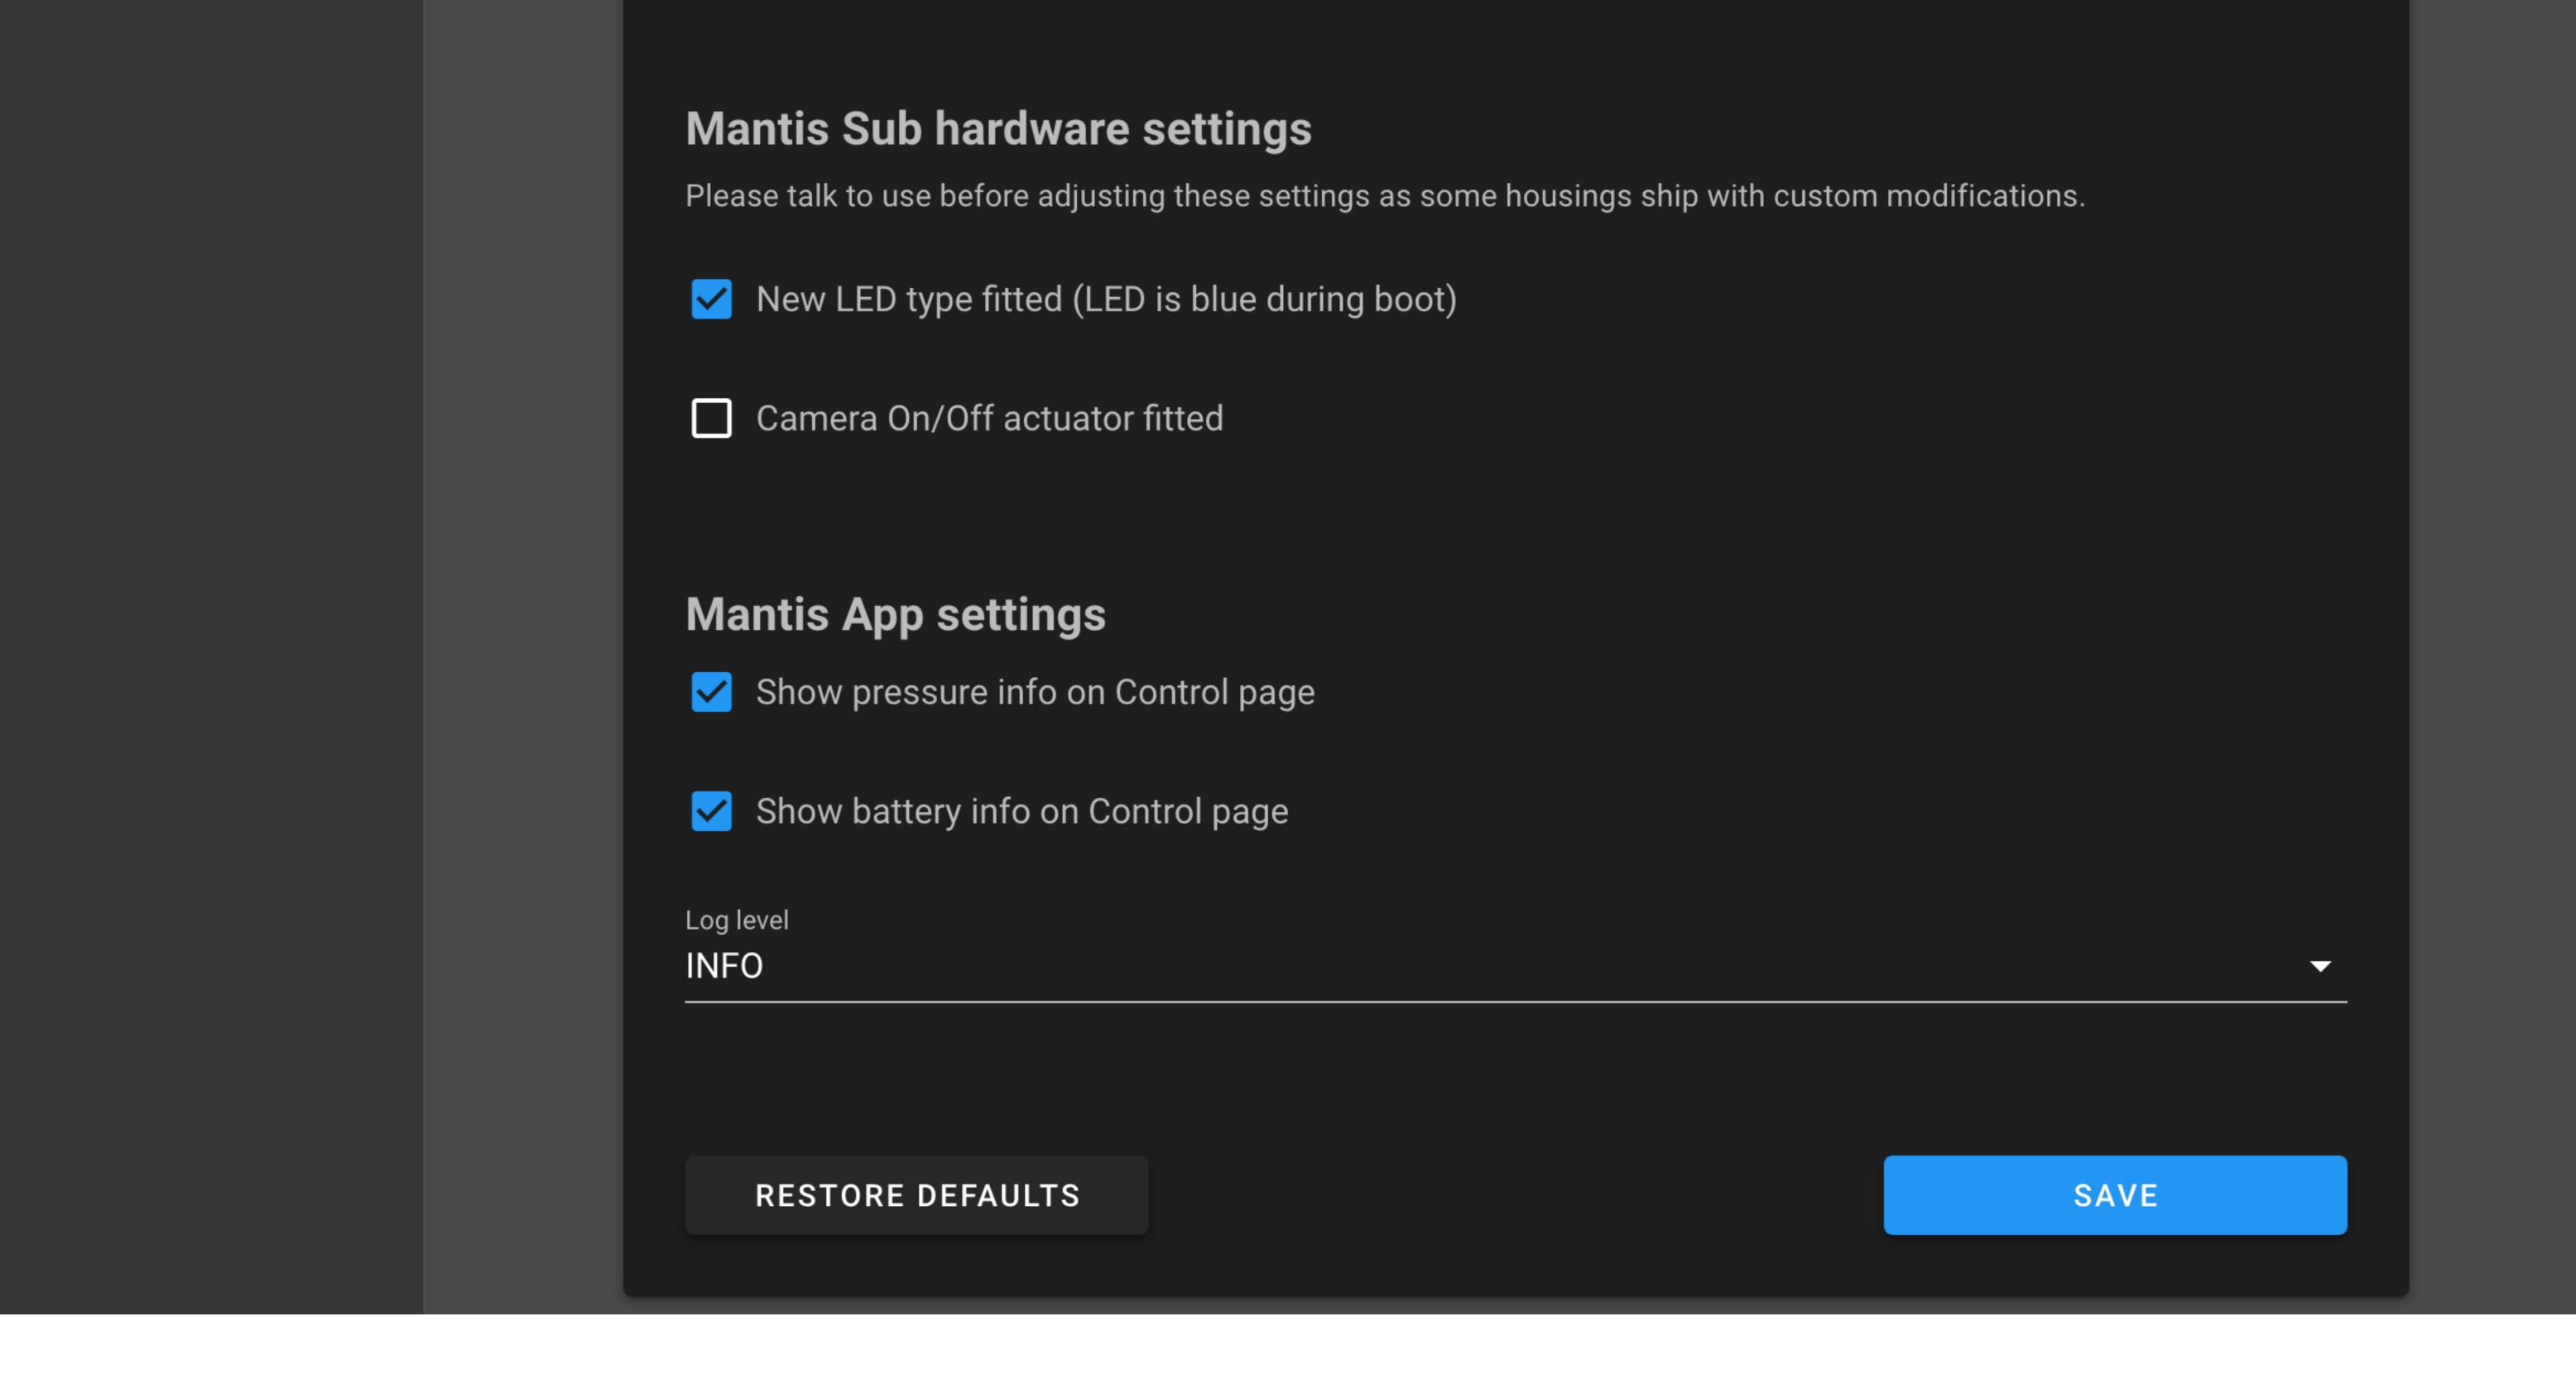

Power settings:

Because the charging circuit of the Insta360 Pro 2 <u>araataa additianal haat nawar ta tha aanara ia bu</u>